

## **GB** Forced draught gas burner

One-stage operation



# RIELLO 40

| CODE    | MODEL          | TYPE  |
|---------|----------------|-------|
| 3755426 | RIELLO 40 GS10 | 554T1 |



Translation of the original instructions

|          |                                                                     |           |
|----------|---------------------------------------------------------------------|-----------|
| <b>1</b> | <b>Declarations .....</b>                                           | <b>3</b>  |
| <b>2</b> | <b>Information and general warnings.....</b>                        | <b>4</b>  |
| 2.1      | Information about the instruction manual .....                      | 4         |
| 2.1.1    | Introduction.....                                                   | 4         |
| 2.1.2    | General dangers.....                                                | 4         |
| 2.1.3    | Other symbols .....                                                 | 4         |
| 2.1.4    | Delivery of the system and the instruction manual.....              | 5         |
| 2.2      | Guarantee and responsibility.....                                   | 5         |
| <b>3</b> | <b>Safety and prevention.....</b>                                   | <b>6</b>  |
| 3.1      | Introduction.....                                                   | 6         |
| 3.2      | Personnel training .....                                            | 6         |
| <b>4</b> | <b>Technical description of the burner .....</b>                    | <b>7</b>  |
| 4.1      | Burner designation .....                                            | 7         |
| 4.2      | Models available.....                                               | 7         |
| 4.3      | Burner categories - Countries of destination .....                  | 7         |
| 4.4      | Technical data .....                                                | 8         |
| 4.5      | Maximum dimensions.....                                             | 8         |
| 4.6      | Firing rate .....                                                   | 9         |
| 4.6.1    | Test boiler.....                                                    | 9         |
| 4.6.2    | Commercial boilers.....                                             | 9         |
| 4.7      | Correlation between gas pressure and burner output .....            | 9         |
| 4.8      | Burner description .....                                            | 10        |
| 4.9      | Burner equipment.....                                               | 10        |
| 4.10     | Control box (RMG88.62C2).....                                       | 11        |
| 4.11     | Air damper opening motor.....                                       | 12        |
| <b>5</b> | <b>Installation .....</b>                                           | <b>13</b> |
| 5.1      | Notes on safety for the installation .....                          | 13        |
| 5.2      | Instructions to avoid burnout or bad combustion of the burner ..... | 13        |
| 5.3      | Handling .....                                                      | 13        |
| 5.4      | Preliminary checks .....                                            | 14        |
| 5.4.1    | Control of the supply .....                                         | 14        |
| 5.4.2    | Control of burner characteristics .....                             | 14        |
| 5.5      | Operating position .....                                            | 14        |
| 5.6      | Securing the burner to the boiler .....                             | 15        |
| 5.6.1    | Hinge installation .....                                            | 15        |
| 5.7      | Positioning the probe - electrode.....                              | 15        |
| 5.8      | Combustion head adjustment.....                                     | 16        |
| 5.9      | Air dampers adjustment .....                                        | 16        |
| 5.10     | Gas feeding .....                                                   | 17        |
| 5.10.1   | Gas feeding line .....                                              | 17        |
| 5.10.2   | Gas train.....                                                      | 17        |
| 5.10.3   | Gas train installation.....                                         | 18        |
| 5.11     | Electrical wiring .....                                             | 19        |
| 5.11.1   | Notes on safety for the electrical wiring.....                      | 19        |
| 5.11.2   | Standard wiring diagram .....                                       | 20        |
| 5.11.3   | Electrical wiring with valve seal control (DUNGS VPS 504).....      | 21        |
| 5.11.4   | Ionisation current.....                                             | 21        |
| <b>6</b> | <b>Start-up, calibration and operation of the burner .....</b>      | <b>22</b> |
| 6.1      | Notes on safety for the first start-up .....                        | 22        |
| 6.2      | Adjustments prior to ignition .....                                 | 22        |
| 6.3      | Combustion adjustment.....                                          | 22        |
| 6.4      | Air pressure switch .....                                           | 22        |
| 6.5      | Operation sequence of the burner.....                               | 23        |
| 6.5.1    | Start-up programme visual diagnostics .....                         | 23        |
| 6.5.2    | Normal operation / flame detection time.....                        | 23        |
| <b>7</b> | <b>Maintenance.....</b>                                             | <b>24</b> |
| 7.1      | Notes on safety for the maintenance.....                            | 24        |
| 7.2      | Maintenance programme .....                                         | 24        |
| 7.2.1    | Maintenance frequency .....                                         | 24        |

7.2.2 Checking and cleaning.....24

7.3 Opening the burner .....25

**8 Faults - Possible causes - Solutions.....26**

8.1 Tracing the causes of the malfunctioning .....26

8.1.1 Control box reset.....26

8.1.2 Visual diagnostics .....26

8.1.3 Software diagnostics.....26

**A Appendix - Accessories .....30**

**1 Declarations****Declaration of conformity in accordance with ISO / IEC 17050-1**

Manufacturer: RIELLO S.p.A.  
 Address: Via Pilade Riello, 7  
 37045 Legnago (VR)  
 Product: Forced draught gas burner  
 Model: RIELLO 40 GS10  
 These products are in compliance with the following Technical Standards:  
 EN 676  
 EN 12100  
 and according to the European Directives:  
 GAD 2009/142/EC Gas Devices Directive  
 MD 2006/42/EC Machine Directive  
 LVD 2006/95/EC Low Voltage Directive  
 EMC 2004/108/EC Electromagnetic Compatibility  
 Such products are marked as follows:



EC-0694CN7805

The quality is guaranteed by a quality and management system certified in accordance with UNI EN ISO 9001.

**Declaration of Conformity A.R. 8/1/2004 & 17/7/2009 – Belgium**

Manufacturer: RIELLO S.p.A.  
 37045 Legnago (VR) Italy  
 Tel. ++39.0442630111  
 www.rielloburners.com  
 Distributed by: RIELLO NV  
 Ninovesteenweg 198  
 9320 Erembodegem  
 Tel. (053) 769 030  
 Fax. (053) 789 440  
 e-mail. info@riello.be  
 URL. www.riello.be

This document certifies that the series of devices specified below is in compliance with the model described in the EC Declaration of Conformity and has been manufactured and distributed in compliance with the requirements defined in the Legislative Decree of January 8th 2004 and July 17th 2009.

Type of product: Forced draught gas burner  
 Model: RIELLO 40 GS10  
 Regulation applied: EN 676 and A.R. of January 8th 2004 - July 17th 2009  
 Controlling organisation: Kiwa Gastec Italia S.p.A.  
 Via Treviso, 32/34  
 31020 San Vendemiano (TV)  
 Italy  
 Values measured: Max. CO: 70 mg/kWh  
 Max. NOx: 110 mg/kWh

Legnago, 01.03.2013

Operating Manager  
 RIELLO S.p.A. - Burners Department  
 Ing. I. Zinna

Research and Development Director  
 RIELLO S.p.A. - Burners Department  
 Ing. R. Cattaneo

## 2 Information and general warnings

### 2.1 Information about the instruction manual

#### 2.1.1 Introduction

The instruction manual supplied with the burner:

- is an integral and essential part of the product and must not be separated from it; it must therefore be kept carefully for any necessary consultation and must accompany the burner even if it is transferred to another owner or user, or to another system. If the manual is lost or damaged, another copy must be requested from the Technical Assistance Service of the area;
- is designed for use by qualified personnel;
- offers important indications and instructions relating to the installation safety, start-up, use and maintenance of the burner.

#### Symbols used in the manual

In some parts of the manual you will see triangular DANGER signs. Pay great attention to these, as they indicate a situation of potential danger.

#### 2.1.2 General dangers

The **dangers** can be of **3 levels**, as indicated below.



**DANGER**

Maximum danger level!

This symbol indicates operations which, if not carried out correctly, cause serious injury, death or long-term health risks.



**WARNING**

This symbol indicates operations which, if not carried out correctly, may cause serious injury, death or long-term health risks.



**CAUTION**

This symbol indicates operations which, if not carried out correctly, may cause damage to the machine and/or injury to people.

#### 2.1.3 Other symbols



**DANGER**

#### **DANGER: LIVE COMPONENTS**

This symbol indicates operations which, if not carried out correctly, lead to electric shocks with lethal consequences.



#### **DANGER: FLAMMABLE MATERIAL**

This symbol indicates the presence of flammable materials.



#### **DANGER: BURNING**

This symbol indicates the risks of burns due to high temperatures.



#### **DANGER: CRUSHING OF LIMBS**

This symbol indicates the presence of moving parts: danger of crushing of limbs.



#### **WARNING: MOVING PARTS**

This symbol indicates that you must keep limbs away from moving mechanical parts; danger of crushing.



#### **DANGER: EXPLOSION**

This symbol signals places where an explosive atmosphere may be present. An explosive atmosphere is defined as a mixture - under atmospheric conditions - of air and flammable substances in the form of gases, vapours, mist or dust in which, after ignition has occurred, combustion spreads to the entire unburned mixture.



#### **PERSONAL PROTECTION EQUIPMENT**

These symbols indicate the equipment that must be worn and kept by the operator for protection against threats against safety and/or health while at work.



#### **OBLIGATION TO ASSEMBLE THE COVER AND ALL THE SAFETY AND PROTECTION DEVICES**

This symbol signals the obligation to reassemble the cover and all the safety and protection devices of the burner after any maintenance, cleaning or checking operations.



#### **ENVIRONMENTAL PROTECTION**

This symbol gives indications for the use of the machine with respect for the environment.



#### **IMPORTANT INFORMATION**

This symbol indicates important information that you must bear in mind.



This symbol indicates a list.

#### **Abbreviations used**

|      |         |
|------|---------|
| Ch.  | Chapter |
| Fig. | Figure  |
| Pag. | Page    |
| Sec. | Section |
| Tab. | Table   |

### 2.1.4 Delivery of the system and the instruction manual

When the system is delivered, it is important that:

- the instruction manual is delivered to the user by the system manufacturer, with the recommendation to keep it in the room where the heat generator is to be installed.
- The instruction manual shows:
  - the serial number of the burner;

- the address and telephone number of the nearest Assistance Centre;

- The system supplier must carefully inform the user about:
  - the use of the system;
  - any further tests that may be required before activating the system;
  - maintenance, and the need to have the system checked at least once a year by a representative of the manufacturer or another specialised technician.
 To ensure a periodic check, the manufacturer recommends the drawing up of a Maintenance Contract.

## 2.2 Guarantee and responsibility

The manufacturer guarantees its new products from the date of installation, in accordance with the regulations in force and/or the sales contract. At the moment of the first start-up, check that the burner is integral and complete.



**WARNING**

Failure to observe the information given in this manual, operating negligence, incorrect installation and carrying out of non authorised modifications will result in the annulment by the manufacturer of the guarantee that it supplies with the burner.

In particular, the rights to the guarantee and the responsibility will no longer be valid, in the event of damage to things or injury to people, if such damage/injury was due to any of the following causes:

- incorrect installation, start-up, use and maintenance of the burner;
- improper, incorrect or unreasonable use of the burner;
- intervention of unqualified personnel;
- carrying out of unauthorised modifications on the equipment;
- use of the burner with safety devices that are faulty, incorrectly applied and/or not working;
- installation of untested supplementary components on the burner;
- powering of the burner with unsuitable fuels;
- faults in the fuel supply system;
- continuation of use of the burner when a fault has occurred;
- repairs and/or overhauls incorrectly carried out;
- modification of the combustion chamber with inserts that prevent the regular development of the structurally established flame;
- insufficient and inappropriate surveillance and care of those burner components most likely to be subject to wear and tear;
- use of non-original components, including spare parts, kits, accessories and optional;
- force majeure.

**The manufacturer furthermore declines any and every responsibility for the failure to observe the contents of this manual.**

### 3 Safety and prevention

#### 3.1 Introduction

The burners have been designed and built in compliance with current regulations and directives, applying the known technical rules of safety and envisaging all the potential danger situations.

It is necessary, however, to bear in mind that the imprudent and clumsy use of the equipment may lead to situations of death risk for the user or third parties, as well as the damaging of the burner or other items. Inattention, thoughtlessness and excessive confidence often cause accidents; the same applies to tiredness and sleepiness.

It is a good idea to remember the following:

- The burner must only be used as expressly described. Any other use should be considered improper and therefore dangerous.

In particular:

it can be applied to boilers operating with water, steam, diathermic oil, and to other uses expressly foreseen by the manufacturer;

the type and pressure of the fuel, the voltage and frequency of the electrical power supply, the minimum and maximum deliveries for which the burner has been regulated, the pressurisation of the combustion chamber, the dimensions of the combustion chamber and the room temperature must all be within the values indicated in the instruction manual.

- Modification of the burner to alter its performance and destinations is not allowed.
- The burner must be used in exemplary technical safety conditions. Any disturbances that could compromise safety must be quickly eliminated.
- Opening or tampering with the burner components is not allowed, apart from the parts requiring maintenance.
- Only those parts envisaged by the manufacturer can be replaced.



**WARNING**

The manufacturer guarantees safety and proper functioning only if all burner components are intact and positioned correctly.

#### 3.2 Personnel training

The user is the person, body or company that has acquired the machine and intends to use it for the specific purpose. He is responsible for the machine and for the training of the people working around it.

The user:

- undertakes to entrust the machine exclusively to suitably trained and qualified personnel;
- undertakes to inform his personnel in a suitable way about the application and observance of the safety instructions. With that aim, he undertakes to ensure that everyone knows the use and safety instructions for his own duties.
- Personnel must observe all the danger and caution indications shown on the machine.
- Personnel must not carry out, on their own initiative, operations or interventions that are not within their province.
- Personnel must inform their superiors of every problem or dangerous situation that may arise.
- The assembly of parts of other makes, or any modifications, can alter the characteristics of the machine and hence compromise operating safety. The manufacturer therefore declines any and every responsibility for any damage that may be caused by the use of non-original parts.

In addition:




- must take all the measures necessary to prevent unauthorised people gaining access to the machine;
- the user must inform the manufacturer if faults or malfunctioning of the accident prevention systems are noticed, along with any presumed danger situation;
- personnel must always use the personal protective equipment envisaged by legislation and follow the indications given in this manual.



## 4 Technical description of the burner

### 4.1 Burner designation

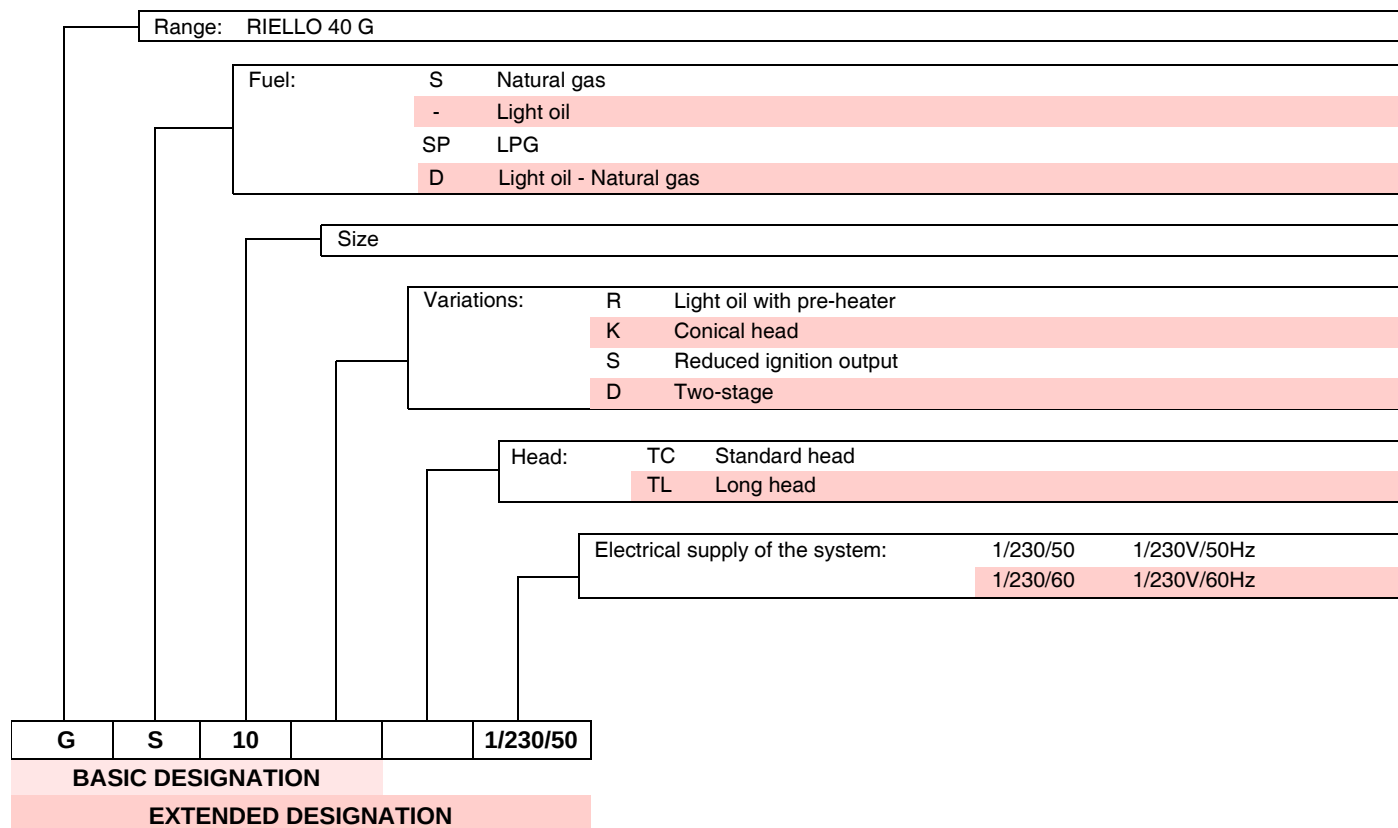

### 4.2 Models available

| Designation    | Voltage  | Code    |
|----------------|----------|---------|
| RIELLO 40 GS10 | 1/230/50 | 3755426 |

### 4.3 Burner categories - Countries of destination

| Country of destination                                         | Gas category        |
|----------------------------------------------------------------|---------------------|
| SE - FI - AT - GR - DK - ES - GB - IT - IE - PT - IS - CH - NO | I <sub>2H</sub>     |
| DE                                                             | I <sub>2ELL</sub>   |
| NL                                                             | I <sub>2L</sub>     |
| FR                                                             | I <sub>2Er</sub>    |
| BE                                                             | I <sub>2E(R)B</sub> |
| LU - PL                                                        | I <sub>2E</sub>     |

Tab. A

#### 4.4 Technical data

| Model                           |                |                                 | RIELLO 40 GS10                                                     |
|---------------------------------|----------------|---------------------------------|--------------------------------------------------------------------|
| Type                            |                |                                 | 554T1                                                              |
| Heat output (Hi) <sup>(1)</sup> | min - max      | kW<br>kcal/h                    | 42 ÷ 116<br>36,000 ÷ 100,000                                       |
| Fuel                            |                | Family 2                        | NCV 8 ÷ 12 kWh/m <sup>3</sup> – 7,000 ÷ 10,340 kcal/m <sup>3</sup> |
|                                 |                |                                 | Pressure: min. 19 mbar – max. 360 mbar                             |
| Operation                       |                |                                 | Intermittent (FS1)                                                 |
| Use                             |                |                                 | Boilers: water and diathermic oil                                  |
| Ambient temperature             |                | °C                              | 0 - 50                                                             |
| Combustion air temperature      |                | °C max                          | 60                                                                 |
| Electrical supply               |                |                                 | 1/230V/50Hz                                                        |
| Fan motor                       |                | rpm - rad/s<br>V - Hz<br>W<br>A | 2800 - 294<br>230 - 50<br>90<br>0.75                               |
| Ignition transformer            |                |                                 | Primary 230V / 0.2A – Secondary 8 kV                               |
| Capacitor                       |                | µF                              | 2                                                                  |
| Absorbed electrical power       |                | kW                              | 0.13                                                               |
| Protection level                |                |                                 | IP40                                                               |
| Weight                          |                | kg                              | 15                                                                 |
| Noise levels <sup>(2)</sup>     | Sound pressure | dB(A)                           | 63.1                                                               |
|                                 | Sound power    |                                 | 74.7                                                               |


**Tab. B**

(1) Reference conditions: Room temperature 20°C - Gas temperature 15°C - Barometric pressure 1013 mbar - Altitude 0 m a.s.l.

(2) Noise emission tests carried out as specified in EN 15036-1 with measurement accuracy  $\sigma = \pm 1.5$  dB, in the manufacturer's combustion chamber with burner operating on test boiler at maximum output.

#### 4.5 Maximum dimensions

The maximum dimensions of the flange and burner are given in Fig. 1.

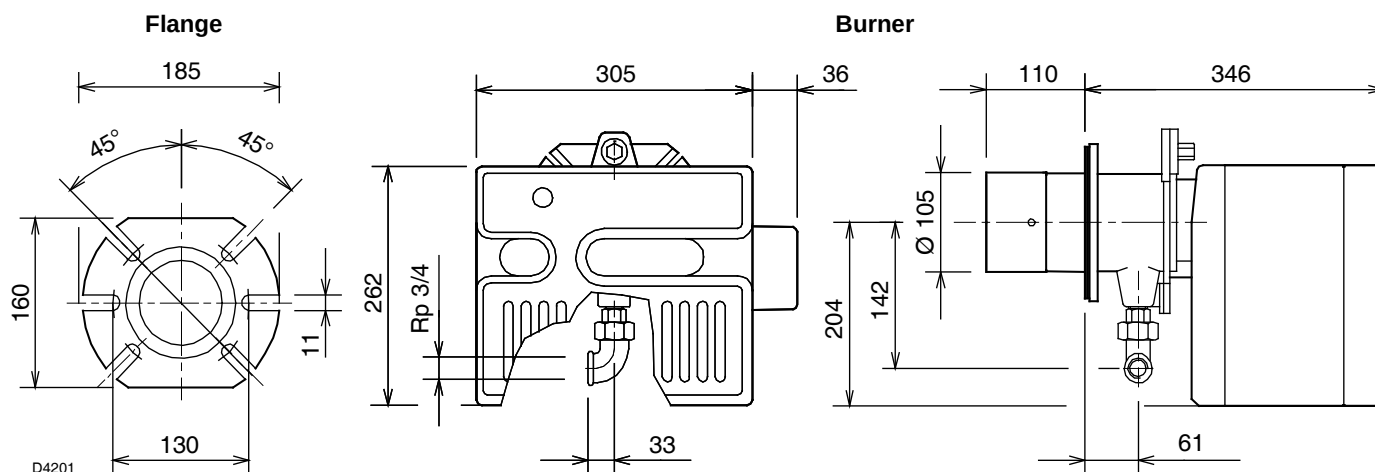
**Fig. 1**

#### 4.6 Firing rate

The burner output is chosen from within the diagram area (Fig. 2).



The firing rate value (Fig. 2) has been obtained considering an ambient temperature of 20°C, an atmospheric pressure of 1013 mbar (approx. 0 m above sea level), and with the combustion head adjusted as shown on page 16.

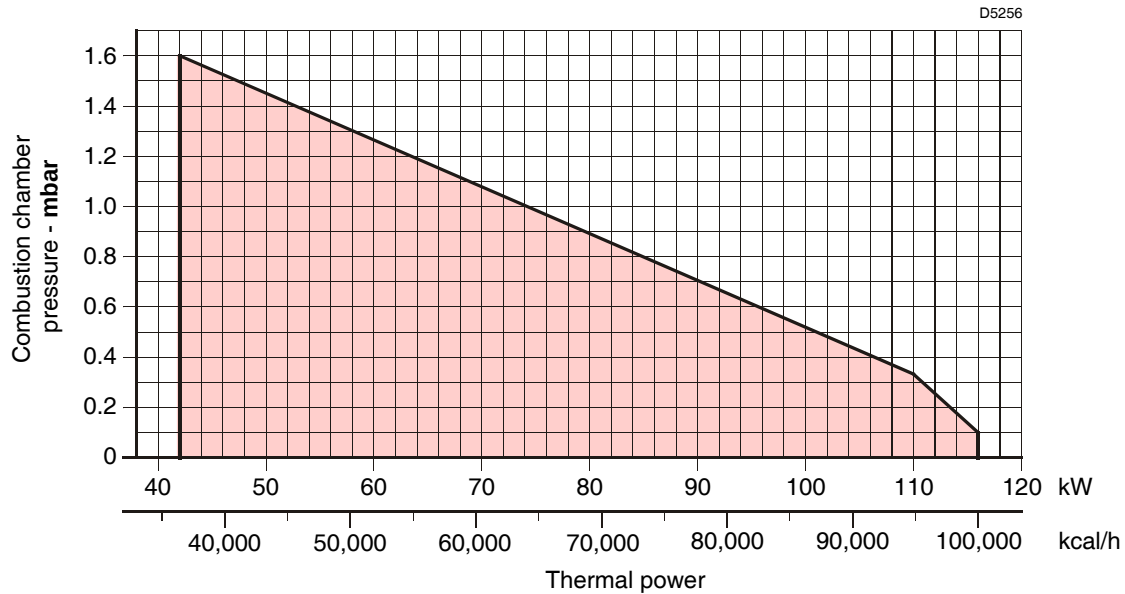


Fig. 2

##### 4.6.1 Test boiler

The firing rate has been defined according to EN 676 standard.

For applications where the boiler does not conform to EN 303, or where the combustion chamber is much smaller than the dimensions given in EN 676, please consult the manufacturers.

##### 4.6.2 Commercial boilers

The burner-boiler matching is assured if the boiler conforms to EN 303 and the combustion chamber dimensions are similar to those shown in the diagram EN 676.

#### 4.7 Correlation between gas pressure and burner output

To obtain the maximum burner output (Fig. 3), 5.8 mbar measured at the pipe coupling are needed (M2, Fig. 15 on page 17) with the combustion chamber at 0 mbar and gas G20 - Ncv = 10 kWh/Nm<sup>3</sup> (8,570 kcal/Nm<sup>3</sup>).


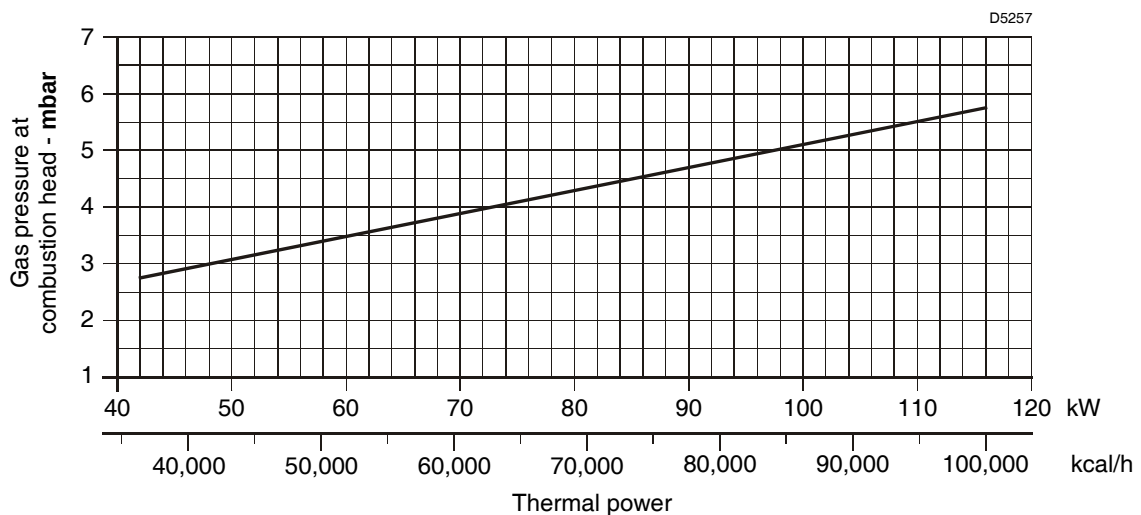


Fig. 3

### 4.8 Burner description

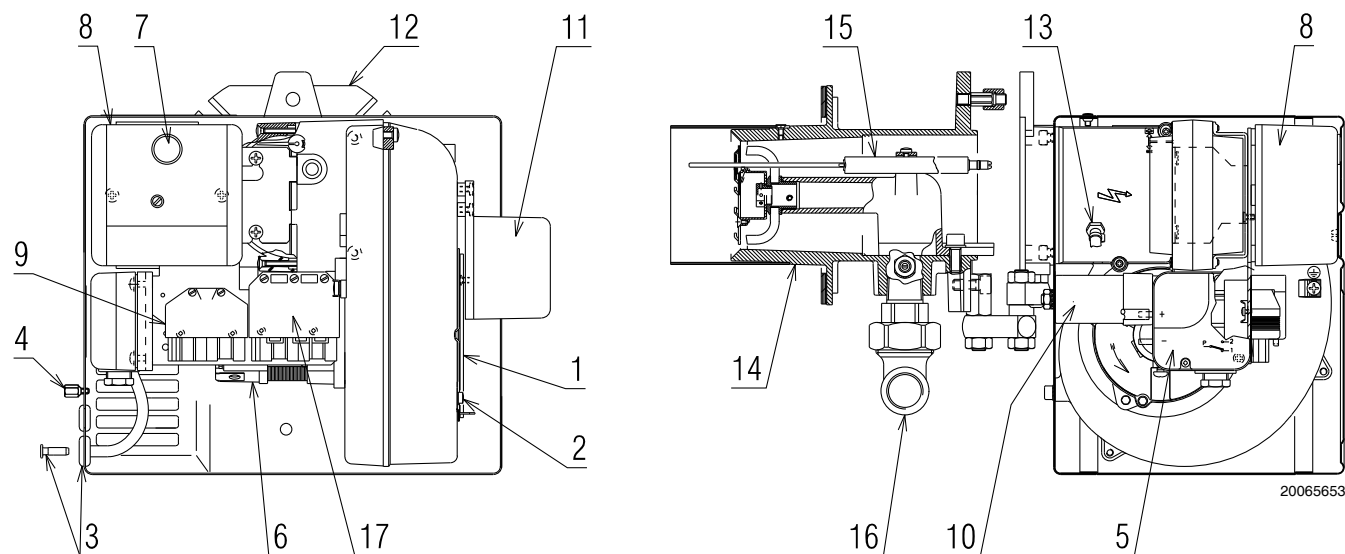

20065653

**Fig. 4**

- |                                     |                                                       |
|-------------------------------------|-------------------------------------------------------|
| 1 Air dampers                       | 12 Flange                                             |
| 2 Damper fixing screws              | 13 Pressure test point (+)                            |
| 3 Pressure test point (-)           | 14 Combustion head                                    |
| 4 Cover fixing screw                | 15 Electrode-probe                                    |
| 5 Air pressure switch               | 16 Gas train elbow                                    |
| 6 Motor                             | 17 7-pole socket for power supply and remote controls |
| 7 Lock-out signal with reset button |                                                       |
| 8 Control box                       |                                                       |
| 9 6-pole socket for gas train       |                                                       |
| 10 Capacitor                        |                                                       |
| 11 Air damper opening motor         |                                                       |



**WARNING**

The supplied grommet and the cover fixing screw should be assembled on the same side as the gas train.

### 4.9 Burner equipment

|                                                    |       |
|----------------------------------------------------|-------|
| Flange screws and nuts for boiler fixing . . . . . | No. 4 |
| Insulating gasket . . . . .                        | No. 1 |
| Cover fixing screw . . . . .                       | No. 1 |
| Cable grommet. . . . .                             | No. 1 |
| Hinge . . . . .                                    | No. 1 |
| 7-pin plug . . . . .                               | No. 1 |
| Instructions. . . . .                              | No. 7 |
| Spare parts list. . . . .                          | No. 1 |

## 4.10 Control box (RMG88.62C2)

### Warnings



To avoid accidents, material or environmental damage, observe the following instructions!

The control box is a safety device! Avoid opening or modifying it, or forcing its operation. Riello S.p.A. cannot assume any responsibility for damage resulting from unauthorised interventions!

- All interventions (assembly and installation operations, assistance, etc.) must be carried out by qualified personnel.
- Before modifying the wiring in the control box connection area, fully disconnect the system from the power supply (omnipolar separation).
- Protection against electrocution from the control box and all connected electric components is obtained with the correct assembly.
- Before any intervention (assembly and installation operations, assistance, etc.), ensure the wiring is in order and that the parameters are correctly set, then make the safety checks.
- Falls and collisions can negatively affect the safety functions. In this case, the control box must not be operated, even if it displays no evident damage.

For safety and reliability, comply with the following instructions:

- avoid conditions that can favour the development of condensate and humidity. Otherwise, before switching on again, make sure the control box is perfectly dry.
- Static charges must be avoided since they can damage the control box's electronic components when touched.

### Use

The control box is a control and supervision system of medium and large capacity forced draught burners, for intermittent operation (at least one controlled shutdown every 24 hours).

### Installation notes

- Check the electric wiring inside the boiler complies with the national and local safety regulations.
- Install switches, fuses, earth connection etc. in compliance with local regulations.
- Do not confuse the powered conductors with the neutral ones.
- Ensure that spliced wires cannot get into contact with neighbouring terminals. Use adequate ferrules.
- Arrange the H.V. ignition cables separately, as far as possible from the control box and the other cables.
- When wiring the unit, make sure the 230V AC mains voltage cables are run strictly separate from extra low-voltage cables, to avoid the risk of electrocution.



S8521

Fig. 5

### Electrical wiring of the flame detector

It is important for signal transmission to be almost totally free of any disturbances or loss:

- Always separate the detector cables from the other cables:
  - the line capacity reduces the magnitude of the flame signal;
  - use a separate cable.
- The cable length must not exceed 1m.
- Respect the polarity
- Insulation resistance:
  - must be at least 50MΩ between the ionisation probe and the earth;
  - a dirty detector reduces the insulation resistance, fostering leakage currents.
- The ionisation probe is not protected against the risk of electrocution. When connected to the electricity supply, the ionisation probe must be protected against any accidental contact.
- Position the ionisation probe so that the ignition spark cannot form an arc on the probe (risk of electric overcharge).

### Technical data

|                               |                       |
|-------------------------------|-----------------------|
| Mains voltage                 | AC 230V -15% / +10%   |
| Mains frequency               | 50/60 Hz ±6%          |
| Built-in fuse                 | T6.3H 250V            |
| Energy consumption            | 20 VA                 |
| Weight                        | approx. 260g          |
| Protection level              | IP20                  |
| Safety class                  | I                     |
| Tightening torque of M4 screw | Max. 0.8 Nm           |
| Allowed cable length          |                       |
| Thermostat                    | max. 20 m at 100 pF/m |
| Air pressure switch           | max. 1 m at 100 pF/m  |
| CPI                           | max. 1 m at 100 pF/m  |
| Gas pressure switch           | max. 20 m at 100 pF/m |
| Flame detector                | max. 1 m              |
| Remote reset                  | max. 20 m at 100 pF/m |
| Environmental conditions      |                       |
| Storage                       | DIN EN 60721-3-1      |
| Climatic conditions           | Class 1K3             |
| Mechanical conditions         | Class 1M2             |
| Temperature range             | -20...+60°C           |
| Humidity                      | < 95% RH              |

Tab. C

4.11 Air damper opening motor

Warnings



To avoid accidents, material or environmental damage, observe the following instructions!  
Avoid opening, modifying or forcing the actuators.

- All interventions (assembly and installation operations, assistance, etc.) must be carried out by qualified personnel.
- Before modifying the wiring in the connection area or the actuator, fully disconnect the burner control device from the power supply (omnipolar separation).
- To avoid the risk of electrocution, protect the connection terminals in a suitable manner and correctly fix the cover.
- Check the wiring is in order.
- Falls and collisions can negatively affect the safety functions. In this case, the servomotor must not be operated, even if it displays no evident damage.

Assembly notes

- Check the relevant national safety standards are respected.

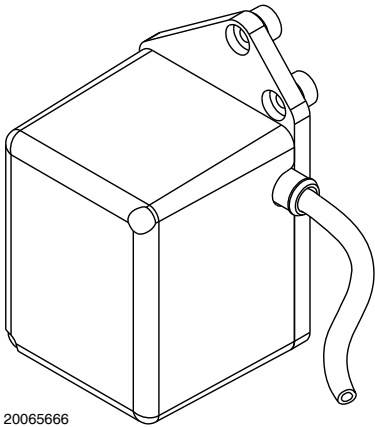


Fig. 6

Technical characteristics

|                       |                                    |
|-----------------------|------------------------------------|
| Voltage and frequency | 230V (+10%) - 50Hz                 |
| Rotation direction    | Clockwise<br>(seen from the shaft) |
| Ambient temperature   | -40 +60 °C                         |
| Electric load         | 16(A) (4), 250V                    |
| Protection level      | IP54                               |

Tab. D

## 5 Installation

### 5.1 Notes on safety for the installation

After carefully cleaning all around the area where the burner will be installed, and arranging the correct lighting of the environment, proceed with the installation operations.



All the installation, maintenance and disassembly operations must be carried out with the electricity supply disconnected.



The installation of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



Combustion air inside the boiler must be free from hazardous mixes (e.g.: chloride, fluoride, halogen); if present, it is highly recommended to carry out cleaning and maintenance more frequently.

### 5.2 Instructions to avoid burnout or bad combustion of the burner

- 1 The burner can not be installed outside as it is suitable for operation in closed rooms only.
- 2 The premises the burner operates in must have openings for the air need for the combustion.  
To be sure about this, you have to control CO<sub>2</sub> and CO in the exhaust gases with all the windows and doors closed.
- 3 If there are air extractors in the premises the burner works, make sure that there are openings for air to be taken in that are big enough to ensure the required air change; In any case, check that when the burner stops the extractors do not draw hot fumes from pipes through the burner.
- 4 When the burner is stopped, the smoke pipe must be kept open and a natural draft created in the combustion chamber.  
If the smoke pipe is closed, the burner must be drawn back till the extraction of blast tube from the furnace. Before operating in this way take the voltage off.

### 5.3 Handling

The transport weight is given in chapter "Technical data" on page 8.

Observe the permissible ambient temperatures for storage and transport: -20 ..... + 70 °C, with max. relative humidity. 80%.



After positioning the burner near the installation point, correctly dispose of all residual packaging, separating the various types of material.



Before proceeding with the installation operations, carefully clean all around the area where the burner will be installed.



The operator must use the required equipment during installation.

## 5.4 Preliminary checks

### 5.4.1 Control of the supply



After removing all the packaging, check the integrity of the contents.

In the event of doubt, do not use the burner; contact the supplier.



The packaging elements (cardboard box, clips, plastic bags, etc.) must not be abandoned as they are potential sources of danger and pollution; they should be collected and disposed of in the appropriate places.



WARNING

A burner label that has been tampered with, removed or is missing, along with anything else that prevents the definite identification of the burner makes any installation or maintenance work difficult.



WARNING

The figure of the label (Fig. 7) is indicative. Some of the data may be arranged in a different position.

### 5.4.2 Control of burner characteristics

Check the identification label of the burner (Fig. 7), showing:

- A the burner model;
- B the burner type;
- C the cryptographic year of manufacture;
- D the serial number;
- E the data for electrical supply and the protection level;
- F the electrical power consumption;
- G the data of the burner's minimum and maximum output possibilities (see Firing rate)

**Warning.** The burner output must be within the boiler's firing rate.

| R.B.L.                      |                        | A                  |                    |                      |                                                                                     | TYP TYPE<br>ΤΥΠΟΣ |                                       | B | B                                                                                           | C |
|-----------------------------|------------------------|--------------------|--------------------|----------------------|-------------------------------------------------------------------------------------|-------------------|---------------------------------------|---|---------------------------------------------------------------------------------------------|---|
| D                           |                        |                    |                    |                      | E                                                                                   |                   |                                       |   | F                                                                                           |   |
| II2ELL<br>3B/P<br>DE        | II2H3P<br>GB,<br>IE,ES | II2E<br>3B/P<br>LU | II2L<br>3B/P<br>NL | GAS<br>GAZ<br>ΑΕΙΟΙΥ | <input checked="" type="checkbox"/> FAM.OIK.2<br><input type="checkbox"/> FAM.OIK.3 |                   | G                                     |   |                                                                                             |   |
| II2H3B/P<br>DK,AT,<br>GR,SE |                        | Icc                | A                  | Imax<br>Peso         | Kg                                                                                  |                   | RIELLO S.p.A.<br>I-37048 Legnago (VR) |   | <br>0694 |   |

20065195

Fig. 7

## 5.5 Operating position



WARNING


- The burner is designed to operate only in positions 1, 2, 3 and 4 (Fig. 8).
- Installation 1 is preferable, as it is the only one that allows the maintenance operations as described in this manual.
- Installations 2, 3 and 4 permit operation but make maintenance and inspection of the combustion head more difficult.



DANGER


- Any other position could compromise the correct operation of the appliance.
- Installation 5 is prohibited for safety reasons.

1

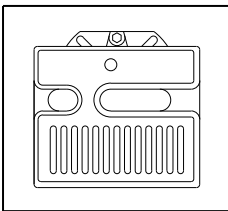


20065196


2

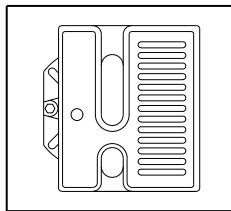

3

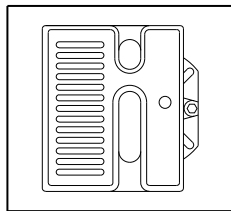

4

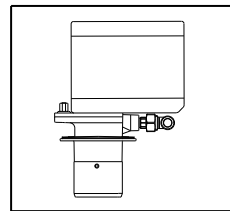

5

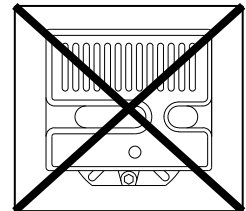


Fig. 8



## 5.6 Securing the burner to the boiler



Provide an adequate lifting system of the burner.



WARNING

Boiler door must have a max. thickness of 90 mm, refractory lining included. If the thickness is greater (max. 150 mm) a combustion head extension should be used, to be requested separately.

- Separate the combustion head assembly from the burner body by removing nut 1) and removing the group A)(Fig. 10).
- Fix the group B)(Fig. 10) to the boiler plate 2), inserting the supplied insulating gasket 3).



WARNING

The seal between burner and boiler must be airtight.

### 5.6.1 Hinge installation

Install the hinge 4), supplied as standard, as shown in Fig. 9.

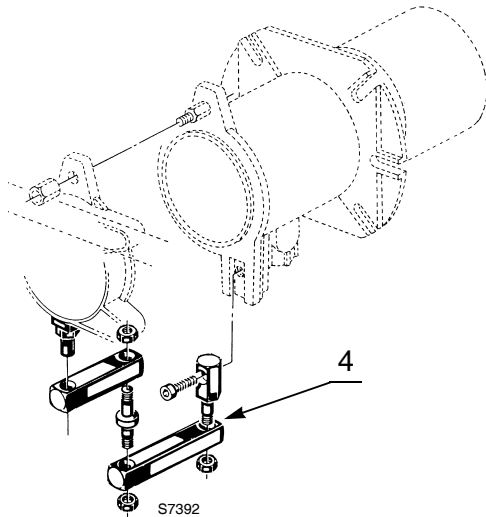


Fig. 9

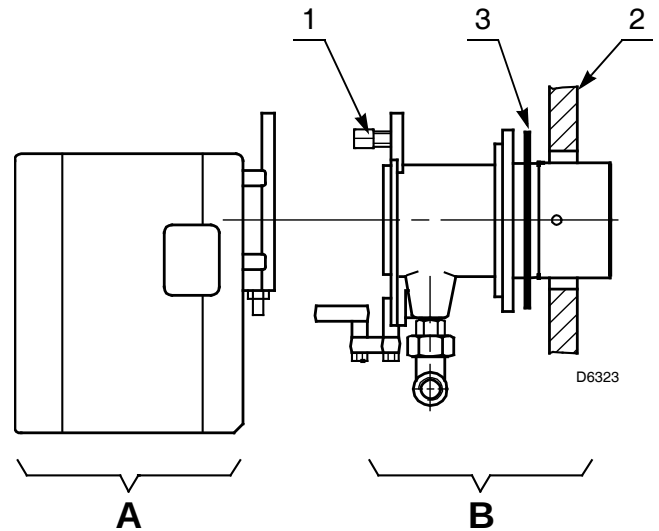


Fig. 10

## 5.7 Positioning the probe - electrode



WARNING

Respect the positions shown in Fig. 11.

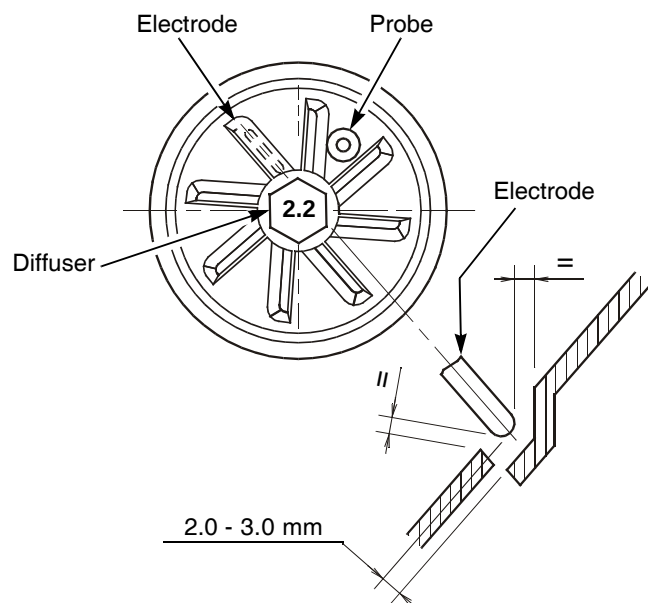
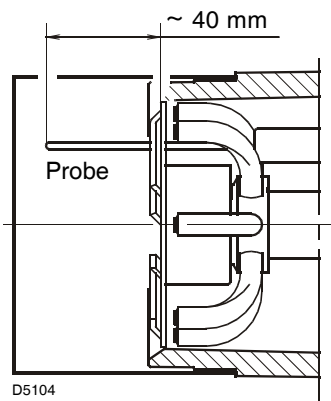


Fig. 11

## 5.8 Combustion head adjustment

To adjust, proceed as follows:

- loosen the screw A)(Fig. 12), move the elbow B) so that the rear plate of the coupling (C) coincides with the set point;
- tighten the screw A).


### Example:

The burner is installed in a 81 kW boiler.


Considering an efficiency of 90%, the burner must supply around 90 kW.

The diagram (Fig. 13) shows that for this output the adjustment must be made on notch 3.

The diagram is to be used only for initial settings,. To ensure good air pressure switch operation it may be necessary to reduce this combustion head opening (notch toward pos. 0).

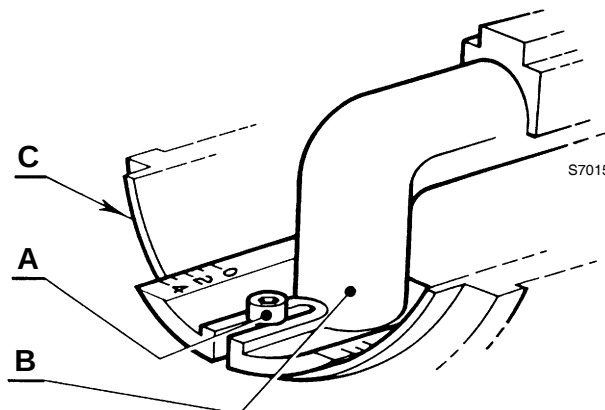

**Fig. 12**

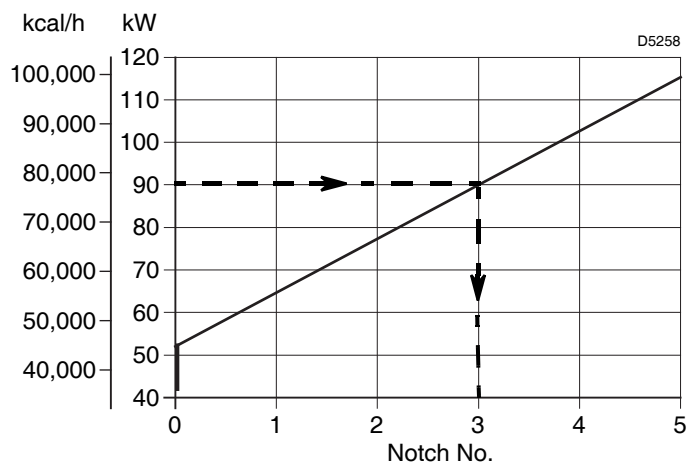

**Fig. 13**

## 5.9 Air dampers adjustment

The air damper 1)(Fig. 14) is powered by the air damper operating motor 2) that ensures that the damper fully opens before the burner's starting cycle.


To adjust the fixed air damper 3)(Fig. 14) it is necessary to:

- loosen the screws 4) and rotate the damper as far as the required point;
- once the best adjustment has been attained, fully screw down the screws 4) to ensure the free circulation of the mobile air damper 1).



**WARNING**

It is advisable to carry out an analysis of the combustion values with the cover assembled.

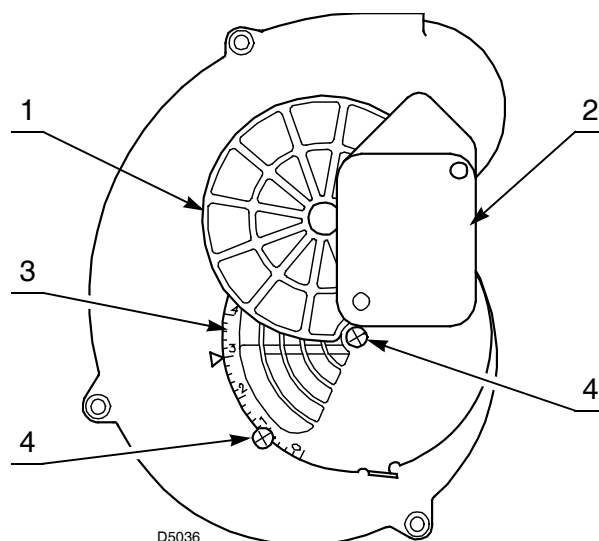

**Fig. 14**

## 5.10 Gas feeding



Explosion danger due to fuel leaks in the presence of a flammable source.


Precautions: avoid knocking, attrition, sparks and heat.

Make sure the fuel interception tap is closed before performing any operation on the burner.



The fuel supply line must be installed by qualified personnel, in compliance with current standards and laws.

### 5.10.1 Gas feeding line

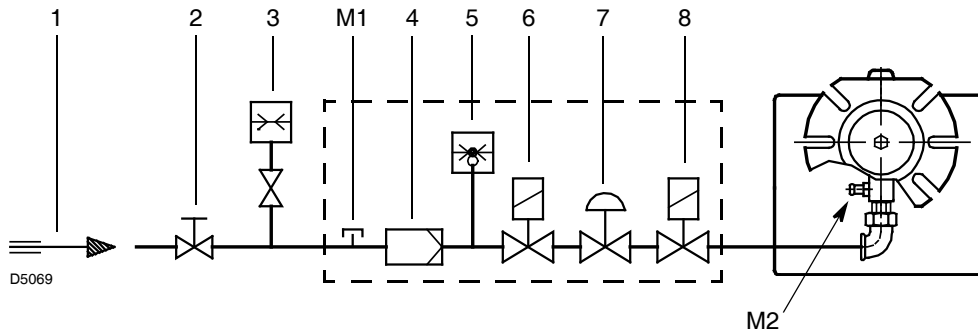

**Fig. 15**

Key (Fig. 15)

- 1 Gas input pipe
- 2 Manual gate (the responsibility of the installer)
- 3 Gas pressure gauge (the responsibility of the installer)
- 4 Filter
- 5 Gas pressure switch
- 6 Safety valve
- 7 Pressure stabiliser
- 8 Adjustment valve

M1 Gas-supply pressure test point on the pressure switch

M2 Pressure coupling test point

### 5.10.2 Gas train

Approved according to standard EN 676 and provided separately from the burner. Supplied separately for its adjustment, see the enclosed instructions.

The train-burner combination is indicated in Tab. E.

| Code    | Model             | Connections |        | Use                         |
|---------|-------------------|-------------|--------|-----------------------------|
|         |                   | Gas train   | Burner |                             |
| 3970530 | MB 405/1 - RSD 20 | Rp 1/2      | Rp 3/4 | Natural gas ≤ 80 kW and LPG |
| 3970531 | MB 407/1 - RSD 20 | Rp 3/4      | Rp 3/4 | Natural gas and LPG         |

**Tab. E**

### 5.10.3 Gas train installation



**DANGER**

Disconnect the electrical power using the main switch.



Check that there are no gas leaks.



Pay attention when handling the train: danger of crushing of limbs.



Make sure that the gas train is properly installed by checking for any fuel leaks.

The gas train 1)(Fig. 16) can be installed on both the left side and the right side of the burner.

Connection between the gas supply line and the train must be made using the gas-in flange 3) supplied, and fastening screws.



**WARNING**


It is best to tighten screws in a criss-cross pattern.  
Do not, under any circumstances, install the valve with the coil facing down.

Connect the 6 pin plug 2)(Fig. 16) of the gas train to the 6-pole socket 9)(Fig. 4 on page 10) of the burner.



**WARNING**

Once installation is complete, you must check for fuel leaks and make sure the gas train is working properly.

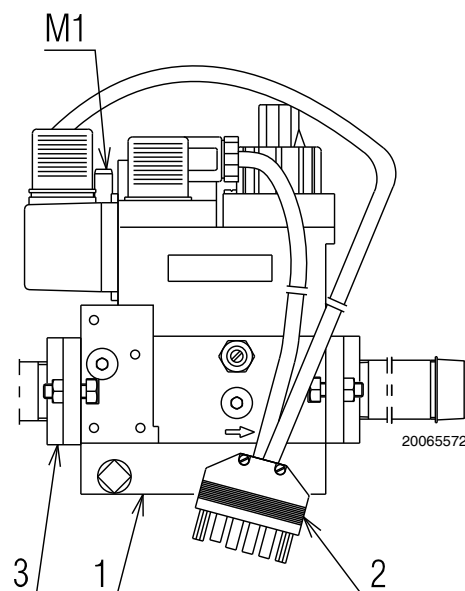

**Fig. 16**

## 5.11 Electrical wiring

### 5.11.1 Notes on safety for the electrical wiring



- The electrical wiring must be carried out with the electrical supply disconnected.
- Electrical wiring must be made in accordance with the regulations currently in force in the country of destination and by qualified personnel. Refer to the wiring diagrams.
- The manufacturer declines all responsibility for modifications or connections different from those shown in the wiring diagrams.
- Check that the electrical supply of the burner corresponds to that shown on the identification label and in this manual.
- The burner has been type-approved for intermittent use.  
In the event of continuous operation, a cycle arrest must be ensured within 24 hours with the use of a time switch positioned in series with the thermostatic line. Refer to the wiring diagrams.
- The electrical safety of the device is obtained only when it is correctly connected to an efficient earthing system, made according to current standards. It is necessary to check this fundamental safety requirement. In the event of doubt, have the electrical system checked by qualified personnel. Do not use the gas tubes as an earthing system for electrical devices.
- The electrical system must be suitable for the maximum power absorption of the device, as indicated on the label and in the manual, checking in particular that the section of the cables is suitable for that level of power absorption.
- For the main power supply of the device from the electricity mains:
  - do not use adapters, multiple sockets or extensions;
  - use a multiple pole switch with at least a 3 mm gap between the contacts (overvoltage category III), as envisaged by the present safety standards.
- Do not touch the device with wet or damp body parts and/or in bare feet.
- Do not pull the electric cables.

Before carrying out any maintenance, cleaning or checking operations:



Disconnect the electrical supply from the burner by means of the main system switch.



Turn off the fuel interception tap.



Avoid condensate, ice and water leaks from forming.

If the cover is still present, remove it and proceed with the electrical wiring according to the wiring diagrams.



After carrying out maintenance, cleaning or checking operations, reassemble the cover and all the safety and protection devices of the burner.

### 5.11.2 Standard wiring diagram

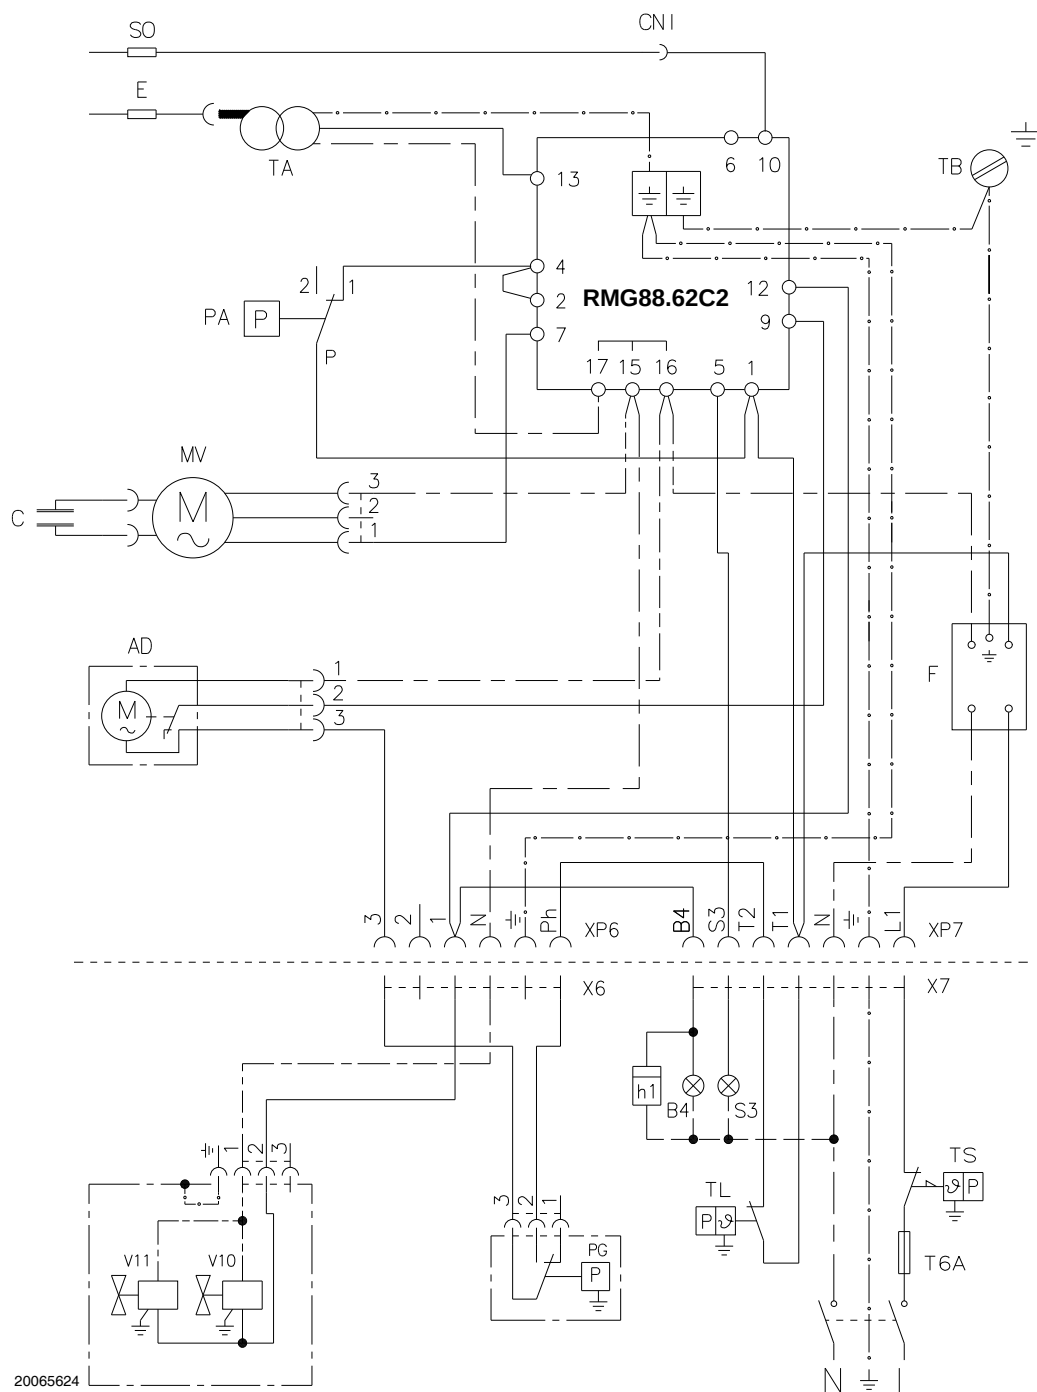


Fig. 17

#### Key (Fig. 17)

|     |                                 |
|-----|---------------------------------|
| AD  | Air damper opening motor        |
| B4  | Operating signal                |
| C   | Motor capacitor                 |
| CN1 | Ionisation probe connector      |
| E   | Ignition electrode              |
| F   | Filter                          |
| h1  | Hour counter (230V - 0.1A max.) |
| MV  | Fan motor                       |
| PA  | Air pressure switch             |
| PG  | Min. gas pressure switch        |
| S3  | Lamp block (230V - 0.5A max.)   |
| SO  | Ionisation probe                |
| TA  | Ignition transformer            |
| TB  | Burner earth                    |
| TL  | Limit thermostat                |
| TS  | Safety thermostat               |

|     |                  |
|-----|------------------|
| T6A | Fuse             |
| V10 | Safety valve     |
| V11 | Adjustment valve |
| XP6 | 6- pole socket   |
| XP7 | 7-pole socket    |
| X6  | 6-pin plug       |
| X7  | 7-pin plug       |



**WARNING**

In the event of phase-phase power supply, a bridge should be installed on the terminal board of the control box between clamp 6 and the earth clamp.

### 5.11.3 Electrical wiring with valve seal control (DUNGS VPS 504)

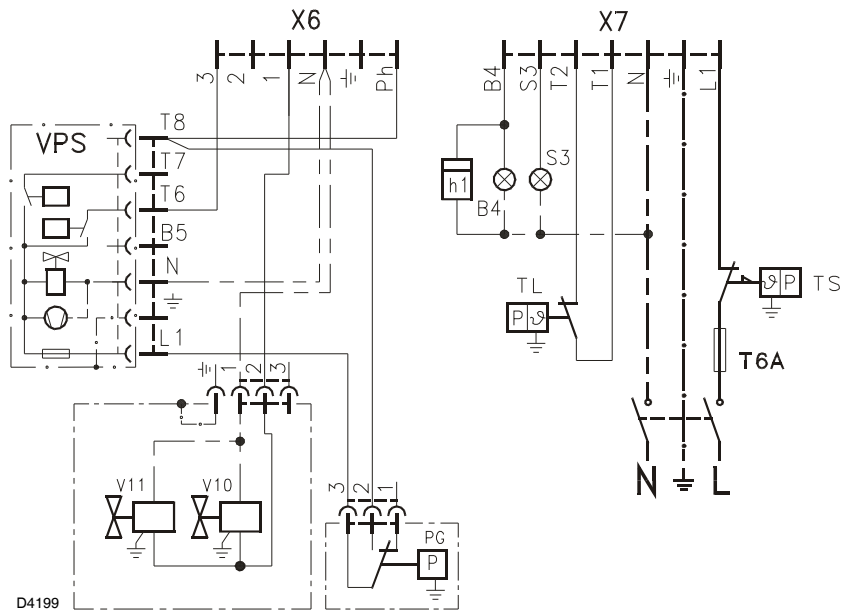


Fig. 18

Key (Fig. 18)

- B4 Operating signal
- h1 Hour counter
- PG Min. gas pressure switch
- S3 Remote lock-out signal (230V - 0.5A max.)
- T6A Fuse
- TL Limit thermostat
- TS Safety thermostat
- VPS Valve leak detection control
- V10 Safety valve
- V11 Adjustment valve
- X6 6 pin plug
- X7 7 pin plug

#### 5.11.4 Ionisation current

The minimum current necessary for the control box operation is  $3 \mu\text{A}$ . The burner normally supplies a higher current value, so that no control is needed. Anyway, if you want to measure the ionisation current, you need to open the connector (CN1)(Fig. 17) on the red wire and insert a microammeter as shown in Fig. 19.

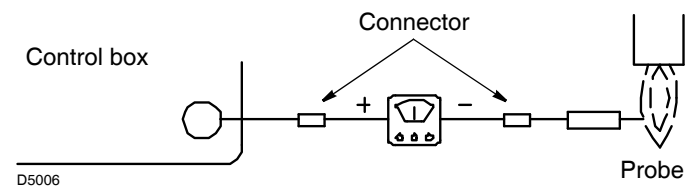


Fig. 19

## 6 Start-up, calibration and operation of the burner

### 6.1 Notes on safety for the first start-up



The first start-up of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



Check the correct working of the adjustment, command and safety devices.

### 6.2 Adjustments prior to ignition

- Check the adjustment of the head as shown in page 16.
- Check the adjustment of the air dampers as shown in page 16.
- Slowly open the manual valves situated upstream from the gas train.
- Adjust the air pressure switch (Fig. 20) to the start of the scale.

- Purge the air from the gas line.  
We recommend using a plastic tube routed outside the building and to purge air until gas is smelt.



Before starting up the burner, it is good practice to adjust the gas train so that ignition takes place in conditions of maximum safety, i.e. with gas delivery at the minimum.

### 6.3 Combustion adjustment

In conformity with Efficiency Directive 92/42/EC the application of the burner on the boiler, adjustment and testing must be carried out observing the instruction manual of the boiler, including verification of the CO and CO<sub>2</sub> concentration in the flue gases, their

temperatures and the average temperature of the water in the boiler.

It is advisable to set the burner according to the type of gas used and following the indications in Tab. F.

| EN 676 |                                                          | Air excess: max. output. $\lambda \leq 1.2$ – min. output $\lambda \leq 1.3$ |                 |              |                           |
|--------|----------------------------------------------------------|------------------------------------------------------------------------------|-----------------|--------------|---------------------------|
| GAS    | Theoretical max<br>CO <sub>2</sub><br>0 % O <sub>2</sub> | Setting CO <sub>2</sub> %                                                    |                 | CO<br>mg/kWh | NO <sub>x</sub><br>mg/kWh |
|        |                                                          | $\lambda = 1.2$                                                              | $\lambda = 1.3$ |              |                           |
| G 20   | 11.7                                                     | 9.7                                                                          | 9.0             | $\leq 100$   | $\leq 170$                |
| G 25   | 11.5                                                     | 9.5                                                                          | 8.8             | $\leq 100$   | $\leq 170$                |
| G 30   | 14.0                                                     | 11.6                                                                         | 10.7            | $\leq 100$   | $\leq 230$                |
| G 31   | 13.7                                                     | 11.4                                                                         | 10.5            | $\leq 100$   | $\leq 230$                |

Tab. F

### 6.4 Air pressure switch

Adjust the air pressure switch (Fig. 20) after performing all other burner adjustments with the air pressure switch set to the start of the scale.

With the burner operating at minimum output, turn the knob counter-clockwise, increasing its value until the burner switches off.

Then turn the knob anticlockwise to an extent that is around 20% of the adjusted value and then check that the burner starts up properly. If the burner locks out again turn the knob slightly in an anticlockwise direction.



In conformity with the standard, the air pressure switch must prevent the air pressure falling below 80% of the adjusted value and the CO in the flue gases exceeding 1% (10,000 ppm).

To check this, insert a combustion analyser in the flue, slowly reduce the burner air setting (for example with a piece of cardboard) and verify that the burner locks out before the CO value in the flue gases exceeds 1%.

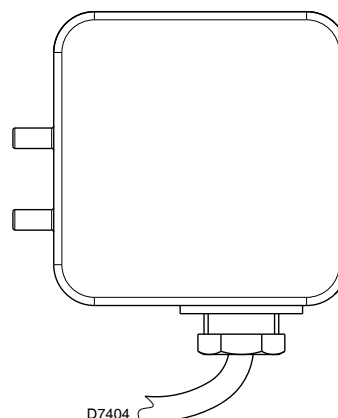


Fig. 20



## 6.5 Operation sequence of the burner

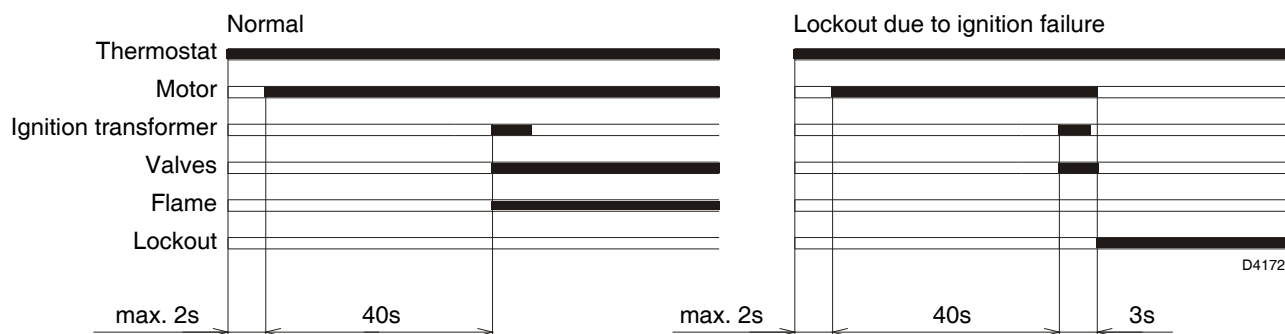


Fig. 21



If the flame goes out while running, the burner goes into lockout within 1 second.

### 6.5.1 Start-up programme visual diagnostics

When operating normally, the various operating statuses can be seen on the control box's LED (reset button) indicated in the form of a colour code (Tab. G).

| Sequences                        | Colour code | Colour       |
|----------------------------------|-------------|--------------|
| Pre-purge                        | ● ● ● ● ● ● | Yellow       |
| Ignition phase                   | ● ○ ● ○ ● ○ | Yellow - Off |
| Operation, flame OK              | ■ ■ ■ ■ ■ ■ | Green        |
| Operation with weak flame signal | ■ ○ ■ ○ ■ ○ | Green - On   |
| Electrical supply below ~ 170V   | ● ▲ ● ▲ ● ▲ | Yellow - Red |
| Lockout                          | ▲ ▲ ▲ ▲ ▲ ▲ | Red          |
| Extraneous light                 | ▲ ■ ▲ ■ ▲ ■ | Red - Green  |

Tab. G

### 6.5.2 Normal operation / flame detection time

The control box has a function through which it is possible to ascertain the correct functioning of the burner (signal: **GREEN LED** permanently on).

To use this function, it is necessary to wait at least 10s. from the time the burner switches on and press the button on the control box for at least 3 seconds.

Once the button is released, the GREEN LED starts to flash, as shown in Tab. H.

The pulses of the LED constitute a signal spaced by approximately 3 seconds.

The number of pulses will measure the probe detection time since the opening of gas valves, according to: Tab. I.


This is updated in every burner start-up.

Once read, the burner repeats the start-up cycle by briefly pressing the control box button.



WARNING

If the result is > 2 s, ignition will be retarded. Then check the adjustment of the hydraulic brake on the gas valve, the adjustment of the air damper and the combustion head.



Tab. H

| Signal   | Flame detection time |
|----------|----------------------|
| 1 blink  | 0.4 s                |
| 2 blinks | 0.8 s                |
| 6 blinks | 2.8 s                |

Tab. I

## 7 Maintenance

### 7.1 Notes on safety for the maintenance

The periodic maintenance is essential for the good operation, safety, yield and duration of the burner.

It allows you to reduce consumption and polluting emissions and to keep the product in a reliable state over time.



The maintenance interventions and the calibration of the burner must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

Before carrying out any maintenance, cleaning or checking operations:



Disconnect the electrical supply from the burner by means of the main system switch.



Turn off the fuel interception tap.



Wait for the components in contact with heat sources to cool down completely.

### 7.2 Maintenance programme

#### 7.2.1 Maintenance frequency



The gas combustion system should be checked at least once a year by a representative of the manufacturer or another specialised technician.

#### 7.2.2 Checking and cleaning



The operator must use the required equipment during maintenance.

##### Combustion

Check there are no occlusions or obstructions in the fuel supply or return lines, in the air suction areas, and in the combustion product waste pipe.

Carry out an analysis of the combustion flue gases.

Significant differences with respect to the previous measurements indicate the points where most care should be exercised during maintenance.

##### Combustion head

Check that the positioning of the combustion head is correct and that it is properly fixed to the boiler.

Open the burner and make sure that all components of the combustion head are in good condition, not deformed by the high temperatures, free of impurities from the surroundings and correctly positioned.

##### Burner

Check that there are not excess wear or loosen screws.  
Clean the outside of the burner.

##### Fan

Check that the air damper is positioned correctly.  
Check to make sure that no dust has accumulated inside the fan or on its blades, as this condition will cause a reduction in the air flow rate and provoke polluting combustion.

##### Boiler

Clean the boiler as indicated in its accompanying instructions in order to maintain all the original combustion characteristics intact, especially the flue gas temperature and combustion chamber pressure.

##### Gas train

Check that the gas train is suited to the burner capacity, the type of gas used and the mains gas pressure.

##### Electrode-probe

Checking the proper positioning of the ionisation probe and electrode as shown in Fig. 11 on page 15.

##### Pressure switches

Check that the air pressure switch and the gas pressure switch are set correctly.

##### Gas leaks

Make sure that there are no gas leaks on the pipe between the gas meter and the burner.

##### Gas filter

Change the gas filter when it is dirty.

##### Combustion

If the combustion values measured before starting maintenance do not comply with applicable legislation or do not indicate efficient combustion, consult the Tab. F on page 22 or contact our Technical Support Service to implement the necessary adjustments.

Let the burner run at full power for about 10 minutes, correctly calibrating all the components indicated in this manual. Then carry out a combustion check verifying:

- Percentage of CO<sub>2</sub> (%);
- CO content (ppm)
- NO<sub>x</sub> content (ppm)
- Ionisation current (µA)
- Smoke temperature at the flue

### 7.3 Opening the burner



Disconnect the electrical supply from the burner by means of the main system switch.



Turn off the fuel interception tap.



Wait for the components in contact with heat sources to cool down completely.

If maintenance of the combustion head is required, refer to the instructions given in "Operating position" on page 14.

For accessing to the interior of the burner, loosen the screws that secure the cover and proceed with the maintenance operation.



#### Operating safety hazards

Repairs to the following components may only be carried out by the respective manufacturers or by personnel instructed by them:

- fan motor
- actuator
- air damper servomotor
- electromagnetic valves
- burner programmer

#### Check the operation

- Start-up of the burner with a sequence of functions (see chapter "Operation sequence of the burner" on page 23).
- Ignition device
- Air pressure switch
- Flame monitoring
- Tightness test of components to the passage of fuel



After carrying out maintenance, cleaning or checking operations, reassemble the cover and all the safety and protection devices of the burner.

8      **Faults - Possible causes - Solutions**


**8.1      Tracing the causes of the malfunctioning**

The control box features a diagnostics function through which any causes of malfunctioning are easily identified (indicator: **RED LED**).

To use this function, you must wait at least 10 seconds once it has entered the safety condition (**lockout**), and then press the reset button.

The control box generates a sequence of pulses (1 second apart), which is repeated at constant 3-second intervals.

Once you have seen how many times the light blinks and identified the possible cause, the system must be reset by holding the button down for 1 - 3 seconds.



Tab. J

Below is a list of the possible methods for resetting the control box and for using the diagnostics.

| Pressing the button                                                   | Control box status                                                                                                                       |
|-----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| From 1 to 3 seconds                                                   | Reset of the control box without visualisation of the visual diagnostics.                                                                |
| More than 3 seconds                                                   | Visual diagnostics of the lockout condition: (LED blinks at 1-second intervals).                                                         |
| More than 3 seconds starting from the condition of visual diagnostics | Diagnostic software using an optical interface and PC (possibility of displaying the hours the machine has been running, faults, etc..). |

Tab. K

**8.1.1      Control box reset**

- To carry out the control box reset, proceed as follows:
- press the button for between 1 and 3s.
  - The burner restarts 2 seconds after the button is released.
  - In case the burner does not restart it is necessary to check if the limit thermostat (TL) is closed.

Once the operations have been carried out, it is necessary to reset the initial state of the control box using the reset procedure.

**8.1.2      Visual diagnostics**

- Indicates the type of burner malfunction causing lockout. To visualise the diagnostics proceed as follows:
- keep the button pressed for more than 3s. from the fixed red led condition (burner lockout). A yellow light blinks to tell you the operation is done.
  - Release the button once the light has blinked.
  - The number of blinks indicates the reason for the malfunctioning (refer to the coding in Tab. M).

**8.1.3      Software diagnostics**

- Gives an analysis of the life of the burner, through optical connections with a PC showing the working hours, number and types of lockout, control box serial number etc.
- To view diagnostics, proceed as follows:
- keep the button pressed for more than 3 seconds from the fixed red led condition (burner lockout).  
A yellow light blink to tell you the operation is done.
  - Release the button for 1 second and then press again for over 3 seconds until the yellow light blinks again.
  - Once the button is released, the red LED will flash intermittently with a higher frequency: only now can the optical link be activated.

The sequence of led pulses issued by the control box identifies the possible types of malfunction, which are listed in the table Tab. L.

| Signal                           | Possible cause                                                                                                                                                                                                                                                                                                                  |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 blinks<br>● ●                  | No stable flame signal is detected within the safety time: <ul style="list-style-type: none"> <li>– faulty ionisation probe;</li> <li>– faulty gas valve;</li> <li>– phase/neutral connections inverted;</li> <li>– faulty ignition transformer;</li> <li>– burner not adjusted (insufficient gas).</li> </ul>                  |
| 3 x blinks<br>● ● ●              | Minimum air pressure switch fails to close: <ul style="list-style-type: none"> <li>– check the intervention of the VPS lockout;</li> <li>– faulty air pressure switch;</li> <li>– air pressure switch not adjusted;</li> <li>– the fan motor is not working;</li> <li>– intervention of maximum air pressure switch.</li> </ul> |
| 4 blinks<br>● ● ● ●              | Minimum air pressure switch does not switch, or else light present in chamber prior to ignition: <ul style="list-style-type: none"> <li>– faulty air pressure switch;</li> <li>– air pressure switch not adjusted.</li> </ul>                                                                                                   |
| 7 blinks<br>● ● ● ● ● ● ●        | Loss of flame during operation: <ul style="list-style-type: none"> <li>– burner not adjusted (insufficient gas);</li> <li>– faulty gas valve;</li> <li>– short-circuit between the ionisation probe and the earth.</li> </ul>                                                                                                   |
| 10 blinks<br>● ● ● ● ● ● ● ● ● ● | – Connection error or internal fault.                                                                                                                                                                                                                                                                                           |

Tab. L

Here below you can find some causes and the possible solutions for some problems that could cause a failure to start or a bad working of the burner

In most cases, an operation irregularity leads to the lighting up of the signal inside the reset button of the control box (Fig. 4 on page 10).

When lockout lamp lights the burner will attempt to light only after pushing the reset button. After this, if the burner functions correctly, the lockout can be attributed to a temporary fault.

Otherwise, if the lockout persists the cause of the fault should be sought and the solutions shown in Tab. M put into effect.



In the event the burner stops, in order to prevent any damage to the installation, do not unblock the burner more than twice in a row. If the burner locks out for a third time, contact the customer service.



In the event there are further lockouts or faults with the burner, the maintenance interventions must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

| Signal          | Problem                                                                                                                  | Possible cause                                   | Recommended remedy                |
|-----------------|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|-----------------------------------|
| 2 blinks<br>● ● | Once the pre-purging phase and safety time have passed, the burner goes into lockout without the appearance of the flame | The operation solenoid lets little gas through   | Increase                          |
|                 |                                                                                                                          | One of the two solenoid valves does not open     | Replace them                      |
|                 |                                                                                                                          | Gas pressure too low                             | Increase pressure at governor     |
|                 |                                                                                                                          | Ignition electrode incorrectly adjusted          | Adjust it                         |
|                 |                                                                                                                          | Electrode grounded due to broken insulation      | Replace                           |
|                 |                                                                                                                          | High voltage cable defective                     | Replace                           |
|                 |                                                                                                                          | High voltage cable deformed by high temperature  | Replace and protect               |
|                 |                                                                                                                          | Faulty ignition transformer                      | Replace                           |
|                 |                                                                                                                          | Incorrect valve or transformer electrical wiring | Check                             |
|                 |                                                                                                                          | Defective control box                            | Replace                           |
|                 |                                                                                                                          | A closed valve upline the gas train              | Open                              |
|                 |                                                                                                                          | Air in pipework                                  | Bleed air                         |
|                 |                                                                                                                          | Gas valves unconnected or with interrupted coil  | Check connections or replace coil |

| Signal                                  | Problem                                                                        | Possible cause                                                                                                                                                                                                                                                                                                                                                                                                              | Recommended remedy                                                                                        |
|-----------------------------------------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| 3 blinks<br>● ● ●                       | The burner does not switch on, and the lock-out appears                        | Air pressure switch in operating position                                                                                                                                                                                                                                                                                                                                                                                   | Adjust or replace                                                                                         |
|                                         | The burner starts and then goes into lockout                                   | Air pressure switch inoperative due to insufficient air pressure:                                                                                                                                                                                                                                                                                                                                                           |                                                                                                           |
|                                         |                                                                                | Air pressure switch poorly adjusted                                                                                                                                                                                                                                                                                                                                                                                         | Adjust or replace                                                                                         |
|                                         |                                                                                | Pressure switch pressure point pipe blocked                                                                                                                                                                                                                                                                                                                                                                                 | Clean                                                                                                     |
|                                         |                                                                                | Combustion head poorly regulated                                                                                                                                                                                                                                                                                                                                                                                            | Adjust                                                                                                    |
|                                         |                                                                                | High pressure in the furnace                                                                                                                                                                                                                                                                                                                                                                                                | Connect air pressure switch to fan suction line                                                           |
|                                         | Lockout during pre-purging phase                                               | Defective motor control contactor                                                                                                                                                                                                                                                                                                                                                                                           | Replace                                                                                                   |
|                                         |                                                                                | Defective electrical motor                                                                                                                                                                                                                                                                                                                                                                                                  | Replace                                                                                                   |
| Motor lockout                           |                                                                                | Replace                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                           |
| 4 blinks<br>● ● ● ●                     | The burner starts and then goes into lockout                                   | Flame simulation                                                                                                                                                                                                                                                                                                                                                                                                            | Replace the control box                                                                                   |
|                                         | Lockout when the burner stops                                                  | Permanent flame in the combustion head or flame simulation                                                                                                                                                                                                                                                                                                                                                                  | Eliminate persistence of flame or replace control box                                                     |
| 6 blinks<br>● ● ● ● ● ●                 | The burner starts and then goes into lockout                                   | Defective or badly adjusted air damper operating motor                                                                                                                                                                                                                                                                                                                                                                      | Adjust or replace                                                                                         |
| 7 blinks<br>● ● ● ●<br>● ● ● ●          | The burner goes into lockout immediately following the appearance of the flame | The operation solenoid lets little gas through                                                                                                                                                                                                                                                                                                                                                                              | Increase                                                                                                  |
|                                         |                                                                                | Ionisation probe incorrectly adjusted                                                                                                                                                                                                                                                                                                                                                                                       | Adjust                                                                                                    |
|                                         |                                                                                | Insufficient ionisation (less than 5 µA)                                                                                                                                                                                                                                                                                                                                                                                    | Check probe position                                                                                      |
|                                         |                                                                                | Earth probe                                                                                                                                                                                                                                                                                                                                                                                                                 | Withdraw or replace cable                                                                                 |
|                                         |                                                                                | Burner poorly grounded                                                                                                                                                                                                                                                                                                                                                                                                      | Check grounding                                                                                           |
|                                         |                                                                                | Phase and neutral connections inverted                                                                                                                                                                                                                                                                                                                                                                                      | Invert them                                                                                               |
|                                         | Defective flame detection circuit                                              | Replace control box                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                           |
|                                         | Burner goes into lockout during operation                                      | Probe or ionisation cable grounded                                                                                                                                                                                                                                                                                                                                                                                          | Replace worn parts                                                                                        |
| 10 blinks<br>● ● ● ● ● ●<br>● ● ● ● ● ● | The burner does not switch on, and the lock-out appears                        | Incorrect electrical wiring                                                                                                                                                                                                                                                                                                                                                                                                 | Check                                                                                                     |
|                                         | The burner goes into lockout                                                   | Defective control box                                                                                                                                                                                                                                                                                                                                                                                                       | Replace                                                                                                   |
|                                         |                                                                                | Presence of electromagnetic disturbances in the thermostat lines                                                                                                                                                                                                                                                                                                                                                            | Filter or eliminate                                                                                       |
|                                         |                                                                                | Presence of electromagnetic disturbance                                                                                                                                                                                                                                                                                                                                                                                     | Use the radio disturbance protection kit                                                                  |
| No blink                                | The burner does not start                                                      | No electricity supply                                                                                                                                                                                                                                                                                                                                                                                                       | Close all switches and check connections                                                                  |
|                                         |                                                                                | A limiter or safety control device is open                                                                                                                                                                                                                                                                                                                                                                                  | Adjust or replace                                                                                         |
|                                         |                                                                                | Line fuse blocked                                                                                                                                                                                                                                                                                                                                                                                                           | Replace                                                                                                   |
|                                         |                                                                                | Defective control box                                                                                                                                                                                                                                                                                                                                                                                                       | Replace                                                                                                   |
|                                         |                                                                                | No gas supply                                                                                                                                                                                                                                                                                                                                                                                                               | Open the manual valves between contactor and train                                                        |
|                                         |                                                                                | Mains gas pressure insufficient                                                                                                                                                                                                                                                                                                                                                                                             | Contact your gas company                                                                                  |
|                                         |                                                                                | Minimum gas pressure switch fails to close                                                                                                                                                                                                                                                                                                                                                                                  | Adjust or replace                                                                                         |
|                                         |                                                                                | Air damper operating motor does not move to the position of minimum ignition                                                                                                                                                                                                                                                                                                                                                | Replace                                                                                                   |
|                                         | The burner continues to repeat the start-up cycle, without lockout             | The gas pressure in the gas mains lies very close to the value to which the gas pressure switch has been set.<br>The sudden pressure drop after valve opening causes the temporary opening of the pressure switch itself; the valve immediately closes and the burner comes to a halt.<br>Pressure increases again, the pressure switch closes again and the ignition cycle is repeated.<br>The sequence repeats endlessly. | Reduce the intervention pressure of the minimum gas pressure switch.<br>Replace the gas filter cartridge. |

| Signal | Problem                           | Possible cause                                    | Recommended remedy |
|--------|-----------------------------------|---------------------------------------------------|--------------------|
|        | Ignition with pulsations          | Poorly adjusted head                              | Adjust             |
|        |                                   | Ignition electrode incorrectly adjusted           | Adjust it          |
|        |                                   | Incorrectly adjusted fan air damper: too much air | Adjust             |
|        |                                   | Output during ignition phase is too high          | Reduce             |
|        | Burner stops with air damper open | Defective air damper opening motor                | Replace            |

**Tab. M**

**WARNING**

If start-up problems persist even after the above-mentioned interventions, first replace the control box, check that there are no short-circuits in the lines of the motor, the gas solenoid valves, the ignition transformer and the external signals.

**A Appendix - Accessories****Long head kit**

| Burner         | Standard length<br>(mm) | Long head length<br>(mm) | Code    |
|----------------|-------------------------|--------------------------|---------|
| RIELLO 40 GS10 | 110                     | 170                      | 3001064 |

**LPG kit**

| Burner         | Code    |
|----------------|---------|
| RIELLO 40 GS10 | 3000884 |

**Town gas kit**

| Burner         | Code    |
|----------------|---------|
| RIELLO 40 GS10 | 3000891 |

**Air suction kit**

| Burner         | Code     |
|----------------|----------|
| RIELLO 40 GS10 | 20027578 |

**Conical flame funnel with diffuser disc**

| Burner         | Projection<br>(mm) | Code    |
|----------------|--------------------|---------|
| RIELLO 40 GS10 | + 18               | 3000918 |

**Faults kit**

| Burner         | Code    |
|----------------|---------|
| RIELLO 40 GS10 | 3001180 |

**7 pin plug kit**

| Burner         | Code    |
|----------------|---------|
| RIELLO 40 GS10 | 3000945 |

**Software diagnostics kit**

| Burner         | Code    |
|----------------|---------|
| RIELLO 40 GS10 | 3002719 |

**Gas trains in compliance with EN 676**

Please refer to manual.









---

The logo consists of the word "RIELLO" in a bold, red, sans-serif typeface.

RIELLO S.p.A.  
I-37045 Legnago (VR)  
Tel.: +39.0442.630111  
[http:// www.riello.it](http://www.riello.it)  
[http:// www.rielloburners.com](http://www.rielloburners.com)